


HUB-01 INTERACTIVE CONFIGURATION

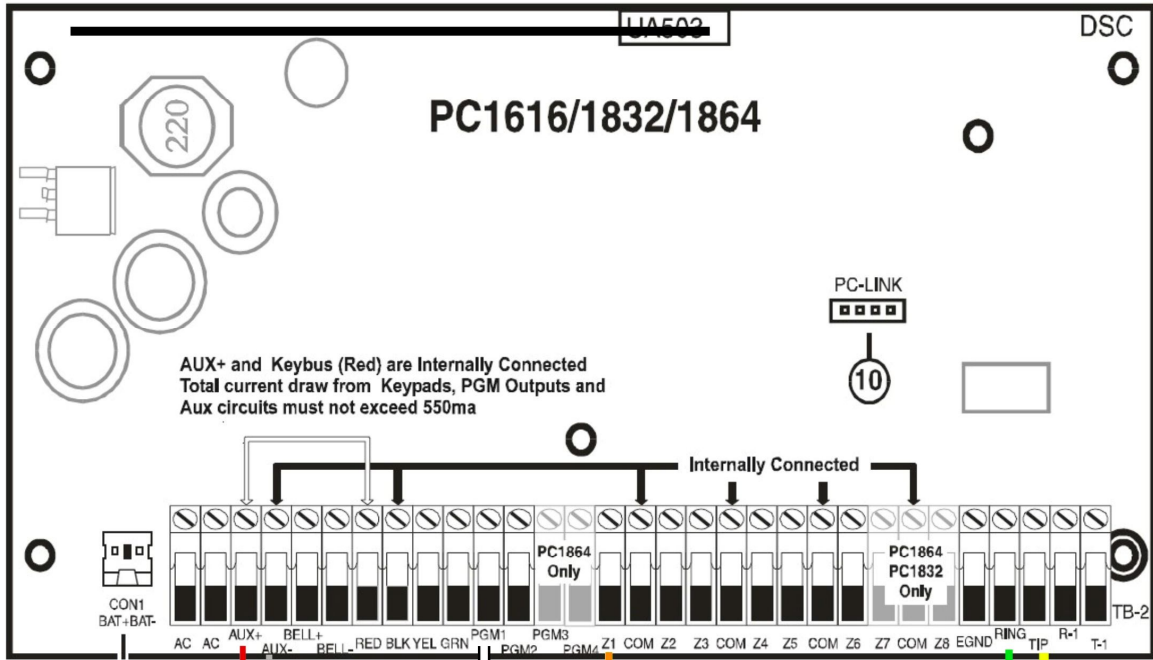

LEGEND

RED 12vdc +


GREY 12vdc -

WHITE Output

ORANGE Input

GREEN Ring (phone)

YELLOW Tip (phone)

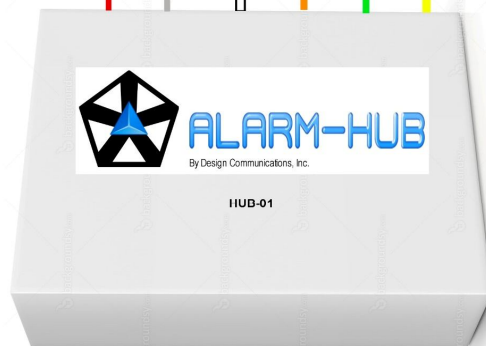

If your keyswitch zone is configured for EOL you must place your EOL between Zn1 & Com. If programmed as closed loops, no EOL is needed.

DSC 1616 / 1832 / 1864 PROGRAMMING

Program Keyswitch zone:

Keypad Display	Enter on Keypad	Comments
Enter Section	001	Zone 1 keyswitch.
Enter Data XX	22 #	22 is for Zone Type Keyswitch, XX is previous value # to go back to Enter Section.

Program Output:

Keypad Display	Enter on Keypad	Comments
Enter Section	009	To program Output 1.
Enter Data XX	05 #	05 is Armed status, XX is previous value, # to return to Enter Section.

Enable Open/Close Reports:

Keypad Display	Enter on Keypad	Comments
Enter Section	351	To program phone 1 call direction.
Toggle Option	1 #	1 for alarms.
Enter Section	367	Open/Close Communicator Call directions.
Toggle Option	1 #	Enable Open/Close Call directions for 1 st communicator, # to confirm.
Enter Section	380	Open/Close Reporting.
Toggle Option	1 #	Open/Close Reporting. Enabled.

Set to Contact ID:

Keypad Display	Enter on Keypad	Comments
Enter Section	350	Program Alarm Format.
Enter Data XX	03 #	03 is for CID format, XX is the previous programmed value, # to return to Enter Section.
Enter Section	#	To get back to main menu.

