


HUB-01 INTERACTIVE CONFIGURATION

GE-CADDX NX6 / NX8

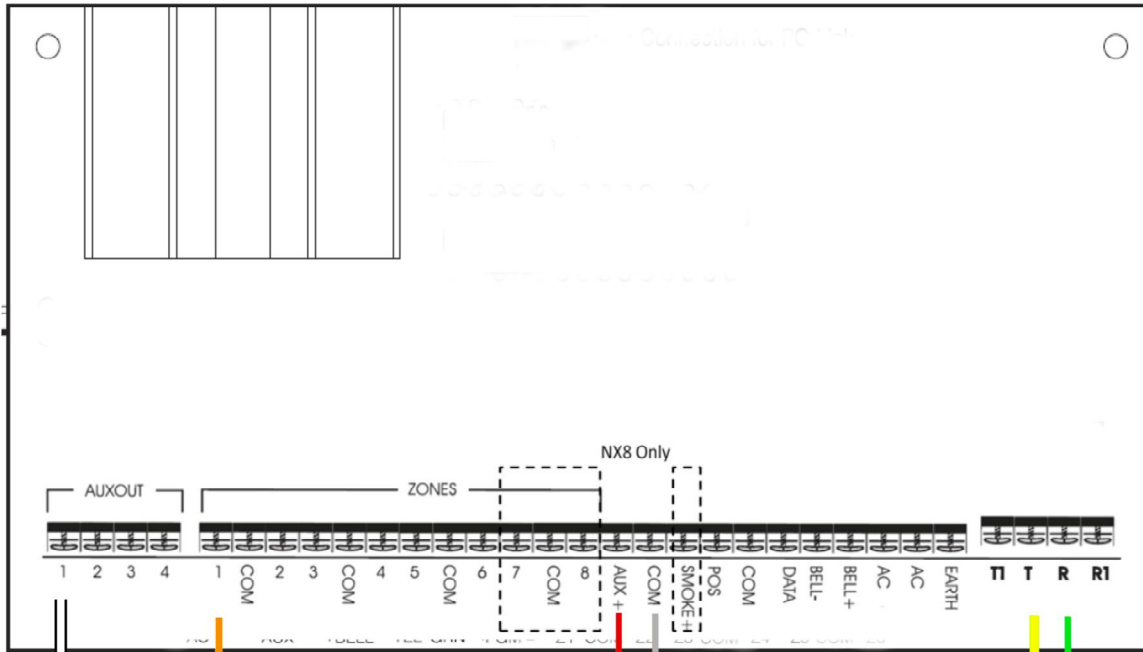

LEGEND

RED 12vdc +

GREY 12vdc -

WHITE Output

ORANGE Input

GREEN Ring (phone)

YELLOW Tip (phone)



Program Keyswitch zone:

Keypad Display	Enter on Keypad	Comments
System Ready	*8	To enter keyswitch programming.
Please Enter Your Code	xxxx	Dealer code.
Enter the Device Address, then Press #	0 #	Device address.
Enter location, then #	25 #	Zone one keyswitch.
Loc# 25 Seg # 1 xx	11 * #	This is displaying Zone 1, xx is the current Zone Type, 11 is for keyswitch.
Enter location Then # (25)	111 #	Zone Type 1 Characteristic Select
-----	3 * #	3 for Keyswitch zone normally open
Enter location Then # (111)		This shows the last location programmed(111) and is ready for the next input

Program Output:

Keypad Display	Enter on Keypad	Comments
Enter location Then # (111)	45 #	To enter OUTPUT Partition programming area.
Loc# 45 Seg # 1 xxxxxxxx	Y *	Y is the partition number that needs to be programmed, xxxxxxxx is any combination of numbers 1-8 and dashes(-).
Enter location Then # (XX)	47 #	To enter OUTPUT event programming area XX is previous programmed locat on.
Loc# 47 Seg # 1 0	21 *	21 is for Armed state.
Loc# 47 Seg # 2 0	0 *	Displays segment 2 of output 1, 0 makes the output follow the event.

Enable Open/Close Reports:

Keypad Display	Enter on Keypad	Comments
Enter location Then # (47)	4 #	To enter open/close report area.
Loc# 4 Seg # 1 xxxxxxxx	12 * #	*2 is for alarm/restores and opening/closings, xxxxxxxx is any combination of numbers 1-8 and dashes(-).
Enter location Then # (xx)	23 #	Enter output
Loc# 23 Seg # 1 0	1 * #	* to enable, # to get back to Enter location area.

Set to Contact ID:

Keypad Display	Enter on Keypad	Comments
Enter location Then # (4)	2 #	To enter alarm report formatting area.
Loc# 2 Seg # 1 XX	13 *	XX is previous programmed format, this is location 2, seg 1 for CS phone 1, 13 is for CID format.
	EXIT	Press EX T to get out of programming menu.