


HUB-01 INTERACTIVE CONFIGURATION

VISTA 15P / 20P

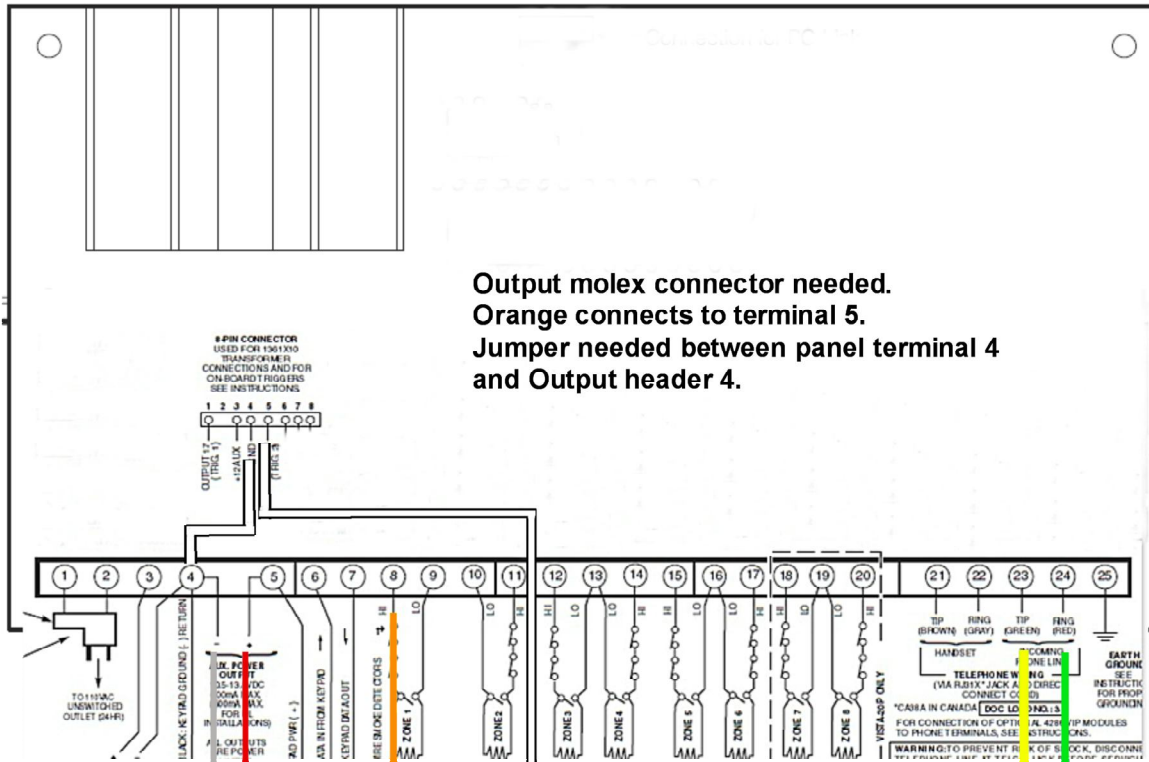

Output moxex connector needed.
Orange connects to terminal 5.
Jumper needed between panel terminal 4
and Output header 4.

LEGEND

RED 12vdc +


GREY 12vdc -

WHITE Output

ORANGE Input

GREEN Ring (phone)

YELLOW Tip (phone)

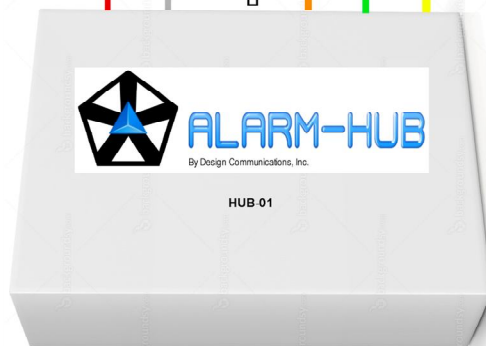

Program Keyswitch zone:

Keypad Display	Enter on Keypad	Comments
	* 56	Zone Programming Menu.
Set to Confirm? 0=NO 1=YES	*	Get to Zone area.
Enter zn num 00=quit XX	XX *	XX= zone number.
ZN ZT P RC HW:RT 0x 00 100 EL:1	*	Enters Zone Type.
ZN T	77 *	Configure zone type for Keyswitch.
ZN ZT P RC HW:RT 0x 77 1 00 EL:1	*00	Get out of Zone programming.

Program Output:

Keypad Display	Enter on Keypad	Comments
Enter * or #	* 80	Output Programming Menu mode.
OUTPUT FUNCT # 00=QUIT 0X	01 *	Output function number XX (01-12).
01 A E P TRIG ?00 C 0 - ZN=00	*	Activate output by zone type.
01 Activated By: Zone Type	2*	
01 Enter Zn Type Keysw xx	* 78	Zone type =xx (78 = keyswitch Red LED, 79 = keyswitch Green LED)
01 Partition x	1 *	Type in partition.
Enter Output No. Txx x	18 *	Output number (17 or 18 are choices).
01 A E P TRIG TTR - - 1 ZT=78	*	
Output Funct # 00=Quit	00	To exit the output programming menu.

Enable Open/Close Reports:

Keypad Display	Enter on Keypad	Comments
	*65	Open Report Code
Open Report 1 2 3	1 1 1	
Away/Stay Rp 1 2 3	*66	Arm Away/Stay Rpt Code
Away/Stay Rp 1 2 3	111111	
	*99	Exit commands.
Enter * or #	*84	Away stay arm.
Auto Sty Opt	0	NO
	*99	Exit programming mode.

Set to Contact ID:

Keypad Display	Enter on Keypad	Comments
Enter * or #	* 48	Report Format.
Rep Form Pri/Sec X X	7 7	4 digit ADEMCO CONTACT ID primary/secondary.