
HUB-01 INTERACTIVE CONFIGURATION

DSC 1555 / 1555MX

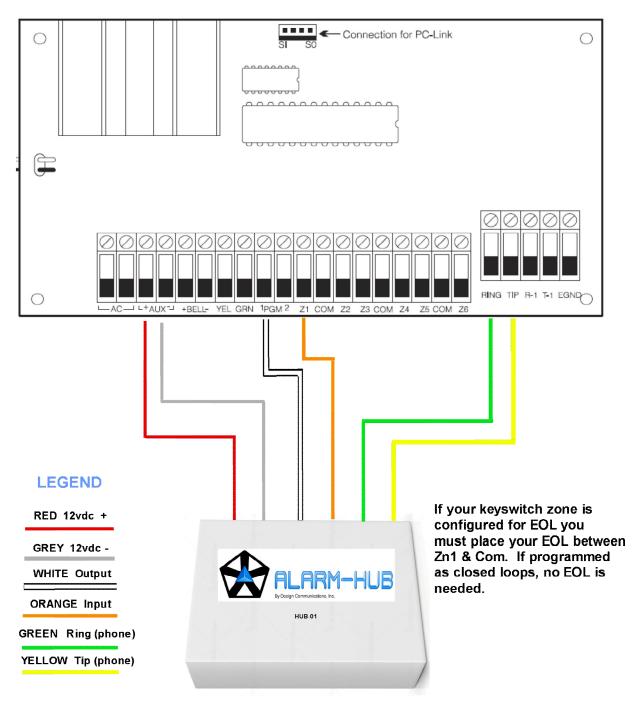

DSC 1555 / 1555MX PROGRAMMING

Program Keyswitch zone:

Keypad Display	Enter on Keypad	Comments
Enter Section	001	Zone 1 keyswitch.
Enter Data XX	22 #	22 is for Zone Type Keyswitch, XX is previous value # to go back to Enter Section.

Program Output:

Keypad Display	Enter on Keypad	Comments
Enter Section	009	To program Output 1.
Enter Data XX	05#	05 is Armed status, XX is previous value, # to return to Enter Section.

Enable Open/Close Reports:

Keypad Display	Enter on Keypad	Comments
Enter Section	361	To program phone 1 call direction.
Toggle Option	1#	1 for alarms.
Enter Section	365	Open/Close Communicator Call directions.
Toggle Option	1#	Enable Open/Close Call directions for 1 st communicator, # to confirm.
Enter Section	380	Open/Close Reporting.
Toggle Option	1#	Open/Close Reporting. Enabled.

Set to Contact ID:

Keypad Display	Enter on Keypad	Comments
Enter Section	360	Program Alarm Format.
Enter Data XX	03 #	03 is for CID format, XX is the previous programmed value, # to return to Enter Section.
Enter Section	#	To get back to main menu.